

Automatic Veterinary Syringes

2 Needles Fowl Pox Vaccinator



To fill the vaccine:

1. Open the end front cap of the vaccinator - with the face up.
2. Fill the 4cc of the vaccine direct to the glass barrel.
3. Close the end front cap – make sure that:
 - the neoprene washer is in place.
 - the 2 needles are in place.
4. Tight the end front cap gently make sure that the needles slide smoothly - if not, release back a little the nozzle.

The Vaccinator is ready to use.

Cleaning and maintenance:


1. Open the end front cap and make sure that the neoprene washer is in place - wash it in clean water.
2. Take out the glass barrel and the special rubber stopper - wash them in water.

Make sure that the eyes of the needles are free!

You may sterilize the Vaccinator before the next use.

The Automatic Fowl Pox Vaccinator with 2 Needles is made of the best materials, is oil-proof, non-corrosive and can be sterilized up to 125°C.

2 Needles Fowl Pox Vaccinator

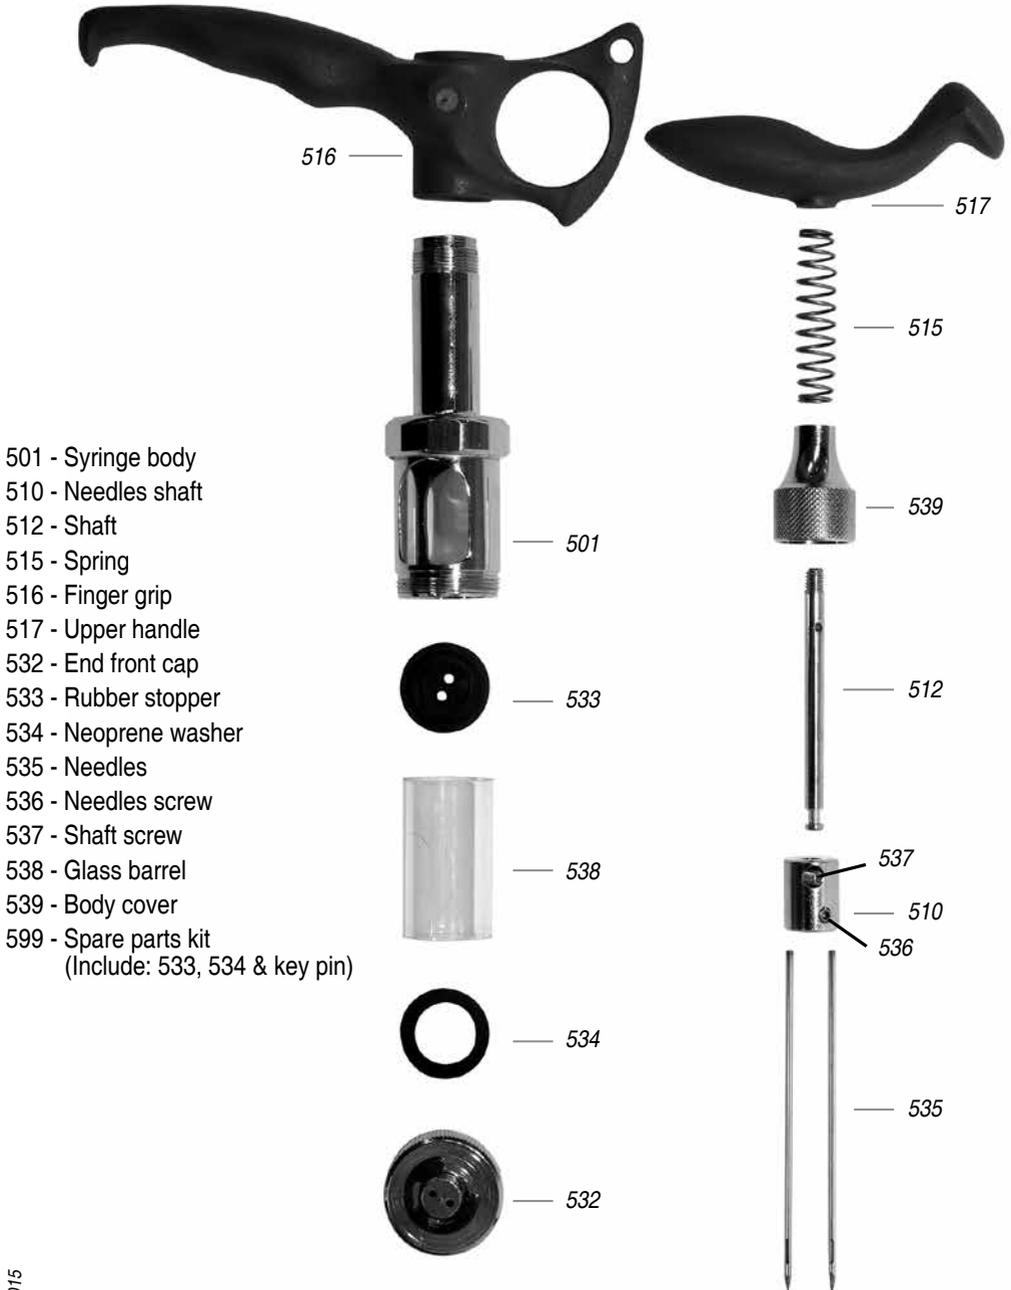

501 - Syringe body

510 - Needles shaft

512 - Shaft

515 - Spring

516 - Finger grip

517 - Upper handle

532 - End front cap

533 - Rubber stopper

534 - Neoprene washer

535 - Needles

536 - Needles screw

537 - Shaft screw

538 - Glass barrel

539 - Body cover

599 - Spare parts kit

(Include: 533, 534 & key pin)